


#22 REV.B - Data Sheet

PHOTOELECTRIC AMPLIFIER TIMING BOARD

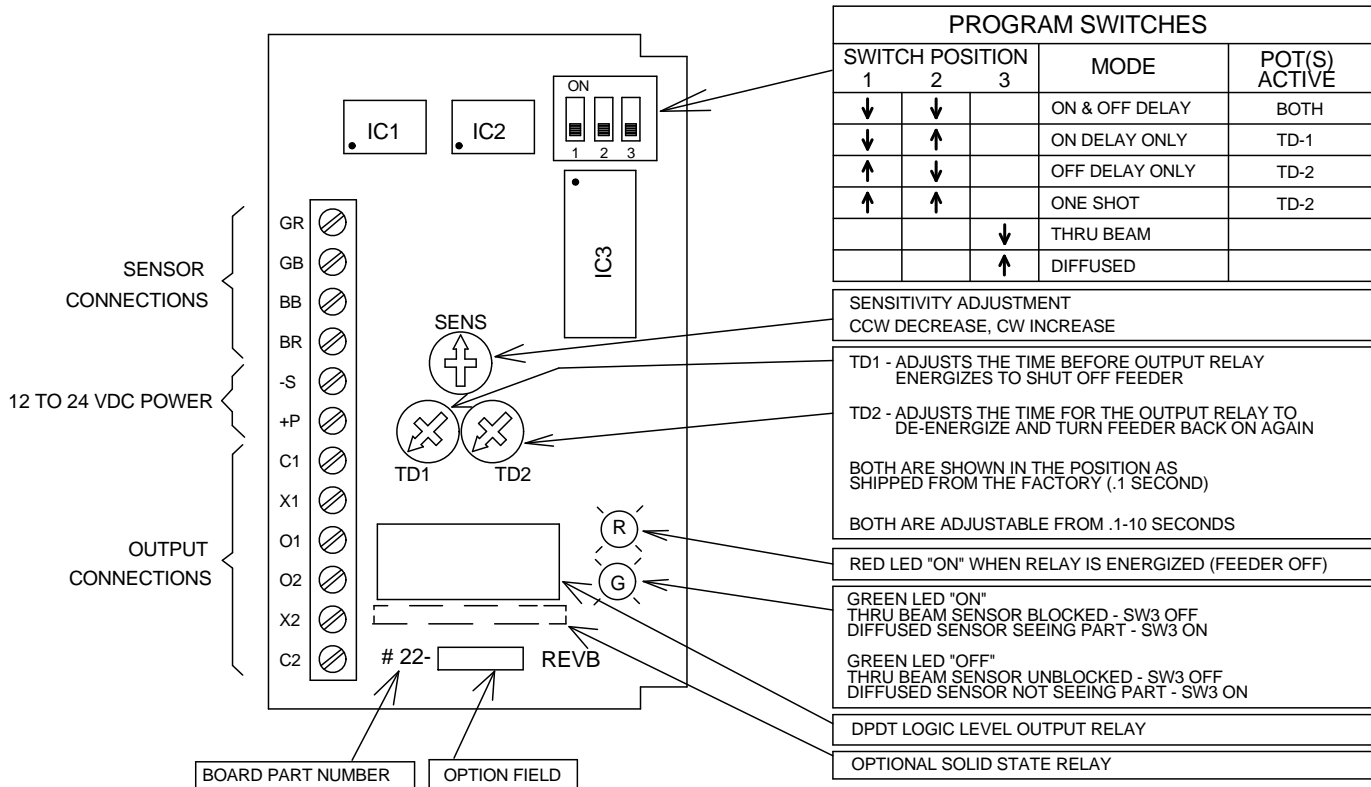

WHEN USED WITH THE "E" SERIES FEEDER CONTROLS, THE THREE POTENTIOMETERS FOR SENSITIVITY AND TIMING ARE ACCESSIBLE BY REMOVING THE BLACK PLUG IN THE FACE PLATE. CAREFULLY ADJUST THE APPROPRIATE POTENTIOMETER WITH AN INSULATED SCREWDRIVER.

INPUT CONNECTIONS

OUTPUT OPTIONS

